06/2018

time without notice and without incurring obligations.

RANGE 1

SAFETY CABINETS WITH EXTINGUISHER

FOR FLAMMABLE PRODUCTS






EX500G

To protect the users health and to improve the life cycle of your safety cabinet, we recommend to install an exhausting system. Do not hesitate to contact-us for more information.



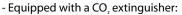

- 120g for AMS10 and AMS20 models;
- 500g for AMS100 and AMS200 models.
- Automatic release by thermic bulb (between 65 and 72°C).
- High and low vent Ø 100 mm with flame arresters (except AMS10 and AMS20 models).
- Self-closing double doors (except AMS10 and AMS20 models, one self-closing door).
- Key locking system.

OPTIONS

- Additional perforated shelf for AMS100 and AMS200 models.
- Spare extinguisher.
- These cabinets are also available without extinguisher. Contact-

us for more information.

EUROPEAN MANUFACTURE

P/N	Outside dim. H x W x D (mm)	Inside dim. H x W x D (mm)	Equipped with a CO ₂ extinguisher	Storage capacity (L)	Containment capacity (L)	Number of shelves	Maximum load by shelf ⁽¹⁾ (kg)	Weight (Kg)
AMS10	455 x 500 x 250	260 x 490 x 220	120 g	10	10	1	20	12
AMS20	500 x 700 x 250	260 x 695 x 230	120 g	20	15	1	25	16
AMS100	1500 x 800 x 400	1250 X 780 X 370	500 g	100	112	3	50	70
AMS100SE			no					
AMS200	1800 x 1000 x 400	1530 X 980X 370	500 g	200	130	3	75	91
AMS200SE			no					
ESAMS1	30 x 780 x 370	Additional shelf for AMS100 and AMS100SE					50	4
ESAMS2	30 x 980 x 370	Additional shelf for AMS200 and AMS200SE					75	5
EX120G	CO ₂ extinguisher for AMS10 and AMS20						-	0,2
EX500G	CO ₂ extinguisher for AMS100 and AMS200						-	0,6

(1) Evenly distributed

CONFORMITY

ADVANTAGES

PASSIVE SECURITY

- Built in steel 15/10th.

one non-ajustable shelf).

- Bottom containment sump.

- Epoxy paint :

directive.

- Normalized labelling according to ISO 3864 and 92/58/CEE european

- 3 adjustable perforated shelves (except AMS10 and AMS20 models,

- Large retention tank for AMS 100 and AMS 200 models.

- Automatic self extinguishing in case of fire.

- Sloping roof to avoid unauthorized storage.

• Beige RAL 1013 (for AMS10 & AMS 20);

- «Flammable» large warning labels.

• Yellow RAL 1023 (for AMS100 & AMS 200).

the right to discontinue or change specifications or designs at any The manufacturer reserves